

Introduction

Modbus is a commonly used protocol used for communicating between industrial devices.

A Modbus Master can communicate with up to 247 Slaves, each with a unique Slave Id from 1 to 247. The Master is responsible for sending commands to the Slaves, which act on the command and reply.

In the RAPIX Lighting Control System, a Zone Controller can act as a Modbus Slave.


A full description of Modbus is beyond the scope of this document. Refer to the official Modbus specification at <http://www.modbus.org/>.

This document describes of controlling and monitoring a RAPIX Lighting Control System using Modbus.

RAPIX Support for Modbus

System Architecture

The RAPIX Zone Controllers form a mesh to allow them to exchange information about zones and scenes, so they can all maintain a model of the whole system. A Modbus Master only needs to connect to a single Zone Controller to get the state of everything in the system. A secondary Zone Controller can be configured to act as Modbus slave in case the connection to the primary Zone Controller fails.

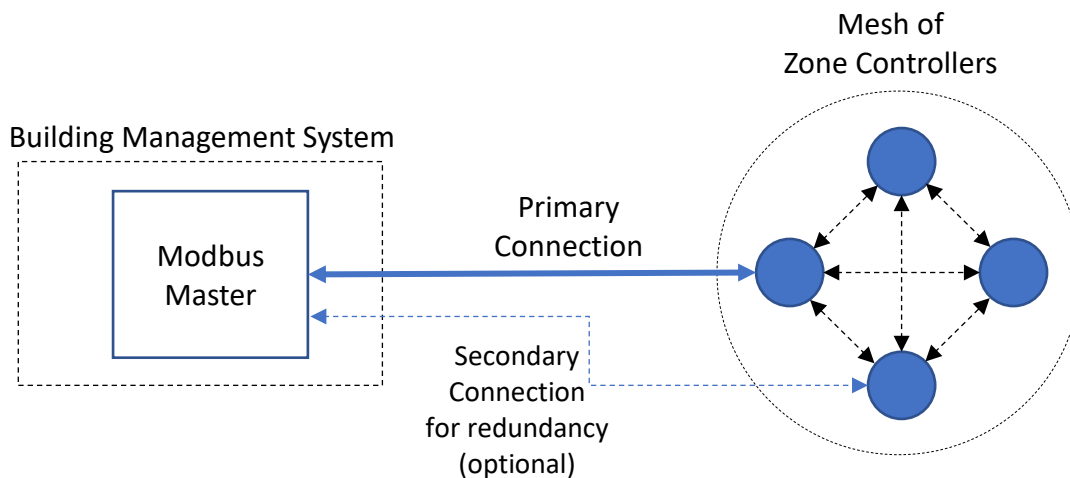

Modbus Options

Modbus has four object types, two of which are supported by the RAPIX Zone Controller:

| Object type | Access | Size | Supported? |
|------------------|------------|---------|------------|
| Coil | Read-write | 1 bit | YES |
| Holding register | Read-write | 16 bits | YES |
| Discrete input | Read-only | 1 bit | NO |
| Input register | Read-only | 16 bits | NO |

The following Modbus functions related to reading and writing the values of Coils and Holding Registers are supported:

| Function Code | Function |
|---------------|----------------------------------|
| 1 | Read Multiple Coils |
| 3 | Read Multiple Holding Registers |
| 5 | Write Single Coil |
| 6 | Write Single Holding Register |
| 15 | Write Multiple Coils |
| 16 | Write Multiple Holding Registers |

The following options are supported:

| | |
|---|---|
| Transport | TCP/IP |
| Holding Register | 16 bit, unsigned integer. Big-endian (most significant byte first) |
| Number of connections to a Modbus Master | 1 or 2 Zone Controllers can each accept a single connection from a Modbus Master. |

Addresses

The RAPIX Lighting Control System uses a one-to-one mapping between a Modbus object number and the RAPIX Zone Id. Therefore, for example, a Modbus object number 7 will map to RAPIX Zone id 7.

Addressing Conventions

Modbus has various conventions for numbering Modbus objects so that, for example, Coil 7 will not be confused with Holding Register 7. The most common number convention is:

- Coil *numbers* start with 0 and span from 00001 to 09999
- Holding Register *numbers* start with 4 and span from 40001 to 49999
- Both of the *number* ranges listed above map to *addresses* 0 to 9998.
- For this convention:
 - the *address* of a coil is the coil *number* minus 1
 - the *address* of a Holding Register is the *number* minus 40001

Some examples of using this convention are shown below:

| Modbus Object | Modbus Address | RAPIX Zone Id |
|---------------------------------------|----------------|---------------|
| Coil number 0000 <u>5</u> | 4 | <u>5</u> |
| Coil number 0 <u>1234</u> | 1233 | <u>1234</u> |
| Holding Register number 4000 <u>5</u> | 4 | <u>5</u> |
| Holding Register number 4 <u>1234</u> | 1233 | <u>1234</u> |

The Modbus *address* is the value used in the Modbus data frames. This value is not visible to the user, and is not generally of interest.

The setup of RAPIX Zone Controllers allows the selection of the address offsets to suit any numbering convention.

Note that some systems do not follow the convention of subtracting 1 from the *number* to get the *address*.

To determine which addressing convention is used by a Modbus Master either:

1. Refer to its documentation.
2. Use the Modbus Master to control a particular Zone. If a different Zone is actually changed, then the addressing option is most likely set incorrectly.
3. Use a protocol analyser to view the Modbus Messages. Refer to the chapter on Wireshark for an example of this.

Modbus to RAPIX Mapping

Various aspects of a RAPIX system can be controlled or monitored through the Modbus interface. The default settings are:

| Modbus Object Number | Maps to | Coils | Registers | Write | Read |
|----------------------|-----------------------------------|-------|-----------|-------|------|
| 1 - 999 | Zone 1 to 999 level | x | ✓ | ✓ | ✓ |
| | Zone 1 to 999 on/off state | ✓ | x | ✓ | ✓ |
| 1000 | Zone Fade Time | x | ✓ | ✓ | ✓ |
| 2001 – 2999 | Zone 1 to Zone 999 error status | x | ✓ | x | ✓ |
| 3001 – 3999 | Scene 1 to Scene 999 | ✓ | ✓ | ✓ | ✓ |
| 4000 - 4255 | Operating Property 0 to 255 | x | ✓ | ✓ | ✓ |
| 5000 - 7550 | Flag Groups 0 to 255, Flags 0 - 9 | ✓ | ✓ | ✓ | ✓ |
| 10001 - 11998 | Zone 1 to 999 Colour | x | ✓ | ✓ | ✓ |

If there are more than 999 Zones or Scenes, then the Modbus Object Numbers will need to be changed accordingly.

Zone Levels

When a Modbus Coil is used to control or monitor a RAPIX Zone, the Coil state (on/off) maps to the Zone state (on/off).

When a Modbus Holding Register is used to control or monitor a RAPIX Zone, the Holding Register value (0 - 65535) maps to the Zone level (0 - 254).

The RAPIX Lighting Control System provides several options for how the Holding Register level mapping can be done to suit the requirements of the Modbus Master.

| Modbus Scale | Purpose | Scaling |
|--------------|--------------------|--|
| 0 – 1 | On/off control | 0 = off 1 = on |
| 0 – 100 | Percentage control | 0 = off 1 – 100 = 1% – 100% |
| 0 – 254 | DALI Level control | 0 = off 1 – 254 = DALI Level 1 to 254 |
| 0 – 255 | 8-bit control | 0 = off 1 – 255 = 0.4% to 100% |
| 0 – 65535 | 16-bit control | 0 = off 1 – 65535 = 0.4% to 100% |

When the zone levels are read from a Holding Register, there are two options for the value returned:

- Target Level: the level requested for the Zone
- Current Level: the current average level of all the members of the zone.

It is recommended that the Target Level be used, because reading the Holding Register will return the same value that was written to it. When using the Current Level, the value read from a Holding Register will often be different from the value written to it. This will occur if:

- a. The Zone is fading to the new level (see below)
- b. The target level is outside of the range of some of the Zone devices. For example, the Zone may be set to 100%, but some devices may be restricted to a maximum of 90%. The Zone average will then be something in between 90% and 100%.

The Modbus Object Number for Zone levels needs to be configured when reading the level of a zone. By default:

- The “Modbus Number for Zone 1 Level” setting is 1.
- Writing register **23** will set the level of Zone **23**.
- Reading register **23** will get the scaled level of Zone **23**.
- Writing coil **23** will set the on/off state of Zone **23**.
- Reading coil **23** will get the on/off state of Zone **23**.

Zone Colour

When a Modbus Holding Register is used to control or monitor a RAPIX Zone colour, pairs of Holding Register values map to the Zone colour. The data format is shown in the table below (binary values).

| Colour Type | Register n | Register n + 1 | Comments |
|--------------------|-------------------|--------------------|---|
| None | 00000000 00000000 | 00000000 00000000 | No colour, or unknown |
| Colour Temperature | 000TTTTT TTTTTTTT | 00000000 00000000 | 13-bit value in Kelvin. 1 to 8191K |
| RGB or RGBW | 1WWWWWWW RRRRRRRR | GGGGGGGG BBBB BBBB | 8-bit red, green and blue. 7-bit white. |
| XY | 01XXXXXX XXXXXXXX | 00YYYYYY YYYYYYYY | 14-bit X and Y |

It is necessary to read and write the registers in pairs (i.e. using Read Multiple Holding Registers and Write Multiple Holding Registers).

Examples

| | | |
|---------------------------|---------------------|-------------------------|
| Colour = 2400K | Register n = 2400 | Register n + 1 = 0 |
| Colour = #FFFF00 (yellow) | Register n = 0x80FF | Register n + 1 = 0xFF00 |
| Colour X = 0.5, Y = 0.5 | Register n = 0x5FFF | Register n + 1 = 0x1FFF |

Zone Fade Times

When a RAPIX Zone is set to a new level, a fade time can be used. This is the time taken for the level to transition from the current level to the new level. Fade times of 0 (instant) and 1 to 65535 seconds (18 hours) can be selected.

To set the fade time, the value (in seconds) is written to a special Holding Register (the address is selectable). Following this, all Zone level changes will use this fade time. The fade time defaults to 0 (instant) on start-up.

Zone Status

RAPIX Zone Controllers can report the status of Zones through Modbus Holding Registers. The status value is a bitfield as shown in the table below:

| Bit-field Value | Name | Meaning |
|-----------------|-------------------------------|--|
| 0x0000 | OK | Everything in the Zone is OK |
| 0x0001 | LEVEL UNKNOWN | The level of some or all devices in the zone is unknown. This is not necessarily an error. |
| 0x0002 | LAMP FAILURE | One or more devices has a lamp failure. Specifically, the DALI Query Status message reported "Lamp Failure". |
| 0x0004 | DEVICE_FAILURE | One or more devices has an internal failure. Specifically, the DALI Query Status message reported "Control Gear Failure". |
| 0x0008 | DEVICE MISSING | One or more devices in the Zone are not responding (but the DALI Line is OK). |
| 0x0010 | DALI LINE FAILURE | One or more DALI Lines (which are part of the Zone) have a communication failure. |
| 0x0020 | ZONE CONTROLLER COMMS FAILURE | One or more Zone Controllers (which are part of the Zone) is not communicating. |
| 0x0040 | EM FAILURE | One or more Emergency Devices has a failure. Specifically, the Device Type 1 Query Failure Status message reported one or more of: <ul style="list-style-type: none"> • Circuit Failure • Battery Duration failure or Battery Failure • Emergency Lamp Failure • Function/Duration Test max. delay exceeded • Function/Duration Test failed |
| 0x0080 | DEVICE_CONFLICT | One or more addresses has multiple devices |
| 0x8000 | OCCUPIED | Optional. Indicates whether the zone is occupied. |

*** Note: 0x indicates a hexadecimal value**

Examples:

Error Status = 17 = 0x11 = 0x10 + 0x01 (DALI Line Failure and Level Unknown)

Error Status = 70 = 0x46 = 0x40 + 0x04 + 0x02 (EM Failure, Device Failure and Lamp Failure)

The Modbus Object Number for Zone status needs to be configured when reading the error status of a zone. By default:

- The "Modbus Number for Zone 1 Status" setting is 2001.
- Reading register 2023 will give the error state of Zone 23.
- Reading register 2000 (i.e. "Zone 0") will give the error state of the whole system.

If the "Modbus Number for Zone 1 Status" is set to 0, reading of the Zone Error Status is disabled.

Scenes

A Modbus Coil or Holding Register can be used to set a RAPIX Scene or to read the state of a RAPIX Scene.

The Modbus Object Number for Scenes needs to be configured for using RAPIX Scenes. By default:

- The “Modbus Number for Scene 1” setting is 3001.
- Writing coil or register **3023** will set the state of RAPIX Scene **23**:
 - If the value written = 1, the RAPIX Scene will be set.
 - If the value written = 0, the RAPIX Scene will be turned off.
- Reading coil or register **3023** will get the state of RAPIX Scene **23**:
 - If the RAPIX Scene is set, the value read = 1.
 - If the RAPIX Scene is not set, the value read = 0.

If the “Modbus Number for Scene 1” is set to 0, use of RAPIX Scenes is disabled.

Operating properties

A Modbus Holding Register can be used to set or read the value of a RAPIX Operating Property.

The Modbus Object Number for Operating Properties needs to be configured for using RAPIX Operating Properties. By default:

- The “Modbus Number for Op. Prop. 0” setting is 4000.
- Writing register **4023** will set the value of RAPIX Operating Property **23**.
- Reading register **4023** will get the value of RAPIX Operating Property **23**.

If the “Modbus Number for Op. Prop. 0” is set to 0, use of RAPIX Operating Properties is disabled.

Flags

A Modbus Coil or Holding Register can be used to set a RAPIX Flag or to read the state of a RAPIX Flag.

The Modbus Object Number for Flags needs to be configured for using RAPIX Flags. By default:

- The “Modbus Number for Flag Group 0” setting is 5000.
- The “Flags per Group” setting is 10.
- The relationship between the Modbus number and the flags is:
 - 5000 = Flag Group 0, Flag 0
 - 5001 = Flag Group 0, Flag 1
 - ...
 - 5009 = Flag Group 0, Flag 9
 - 5010 = Flag Group 1, Flag 0
 - ...
 - 5019 = Flag Group 1, Flag 9
 - Etc.
- Writing a coil or register will set the state of a RAPIX Flag:
 - If the value written = 1, the RAPIX Flag will be set.
 - If the value written = 0, the RAPIX Flag will be cleared.
- Reading a coil or register will get the state of a RAPIX Flag:
 - If the RAPIX Flag is set, the value read = 1.
 - If the RAPIX Flag is clear, the value read = 0.


10 Flags per Group

If the “Modbus Number for Flag 0” is set to 0, use of RAPIX Flags is disabled.

Configuring the Modbus settings using RAPIX Integrator

To configure the Modbus settings for the RAPIX Lighting Control System:

- Use RAPIX Integrator Software
- Select the Site tab:

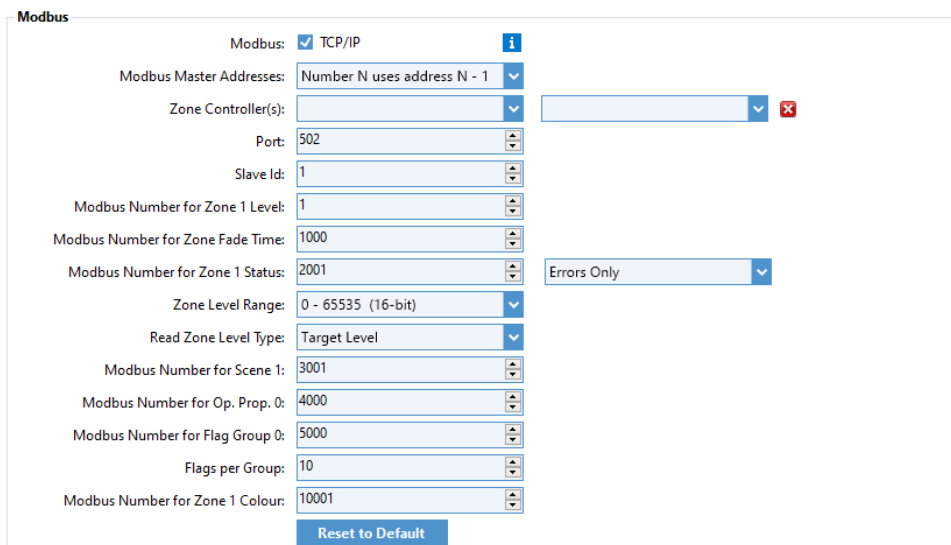

Modbus

Modbus: TCP/IP i

Modbus Master Addresses: Number N uses address N - 1

Zone Controller(s):

Port: 502

Slave Id: 1

Modbus Number for Zone 1 Level: 1

Modbus Number for Zone Fade Time: 1000

Modbus Number for Zone 1 Status: 2001 Errors Only

Zone Level Range: 0 - 65535 (16-bit)

Read Zone Level Type: Target Level

Modbus Number for Scene 1: 3001

Modbus Number for Op. Prop. 0: 4000

Modbus Number for Flag Group 0: 5000

Flags per Group: 10

Modbus Number for Zone 1 Colour: 10001

[Reset to Default](#)

The Modbus settings are described in the table below and are discussed in detail in the previous sections:

| Setting | Purpose | Default Value |
|----------------------------------|--|---------------|
| Modbus TCP/IP | Enables the Modbus interface on the selected Zone Controller | Disabled |
| Modbus Master Addresses | Most commonly, a Modbus Master will use <i>address N – 1</i> for Modbus <i>Object Number N</i> . See section on Addressing Conventions. | N - 1 |
| Zone Controller | The Zone Controller(s) that will have the Modbus interface enabled. Ozuno recommends the Zone Controller with the lowest IP address is <u>not</u> used, as this will be the Master Zone Controller and will therefore be busier than the others. | - |
| Port | The TCP/IP Port | 502 |
| Slave Id | The Modbus Slave Id | 1 |
| Modbus Number for Zone 1 Level | The Modbus Object Number to use to control or monitor the level of Zone 1. The next number will be for Zone 2 etc. | 1 |
| Modbus Number for Zone Fade Time | The Modbus Object Number used for setting the Zone fade time (for all Zones) | 1000 |
| Modbus Number for Zone 1 Status | The Modbus Object Number to use to monitor the error status of Zone 1. The next number will be for Zone 2 etc. | 2001 |
| | The Zone status just includes error conditions by default. There is an option to include the Zone occupancy state if required. | Errors only |
| Zone Level Range | The range that the Modbus master will use for the Zone Level | 65535 |
| Read Zone Level Type | Whether to read the Zone target level or current level | Target Level |
| Modbus Number for Scene 1 | The Modbus Object Number to use to control or monitor the state of Scene 1. The next number will be for Scene 2 etc. | 3001 |
| Modbus Number for Op Prop 0 | The Modbus Object Number to use to control or monitor the value of Operating Property 0. The next number will be for Operating Property 1 etc. | 4000 |
| Modbus Number for Flag Group 0 | The Modbus Object Number to use to control or monitor the value of Flag Group 0, Flag 0. The next number will be for Flag Group 0, Flag 1 etc. | 5000 |
| Flags Per Group | The number of flags included in each Group | 10 |
| Modbus Number for Zone 1 Colour | The Modbus Object Number to use to control or monitor the colour of Zone 1. The next number will be the second half of the value. The number after that will be for Zone 2 etc. | 10001 |

Using Tags to select the available entities

The RAPIX entities (Zones, Scenes, Flags and Operating Properties) that are available via the Modbus interface can be selected using Tags. Refer to Application Note APN-RAPIX-032 for details.

Run-time Execution

After the configuration has been set using RAPIX Integrator software, it is saved to the Zone Controllers.

After the configuration has been transferred, the Zone Controller that was configured as the Modbus slave will accept Modbus over TCP requests.

Use with Third-Party Systems

Configuration

To interface a Modbus system to the RAPIX Lighting Control System, use this configuration:

1. Use the Zone Controller IP Address and Port as set in RAPIX Integrator
2. Use 16-bit unsigned, big-endian format for Holding Registers
3. Configure the Modbus system and/or the Modbus settings in RAPIX Integrator so that the following are compatible:
 - a. Numbering scheme (i.e. Address offset value);
 - b. Level range; and
 - c. Slave Id.

Polling

Modbus Masters poll Modbus Slave devices (such as the RAPIX Zone Controller) to read the values of coils and registers.

The number of Modbus objects being read, and the rate of the polling should be minimised to reduce the processing load on a RAPIX Zone Controller.

The RAPIX Zone Controller display can be used to show the CPU usage.

Reduce the Modbus Master polling rate if the RAPIX Zone Controller CPU load increases by more than 20%.

Project Report


The Project Report (available from the Tools Menu) generates a section summarising the Modbus settings:

| Feature | Details |
|----------------------|--|
| Modbus Master | Modbus Object Number N maps to address N - 1 (default behaviour) |
| Zone Controller 1 | Floor 1 ZC (172.20.205.1) |
| Zone Controller 2 | Floor 2 ZC (172.20.205.2) |
| Port | 502 |
| Slave Id | 0 |
| Zone State | Coil number 1 gets or sets the state (on/off) of zone 1 , etc. |
| Zone Level | Holding Register number 1 gets or sets the level of zone 1 , etc. |
| Zone Fade Time | Holding Register number 999 sets the fade time for all Zones |
| Zone Status | Holding Register number 1001 gets the status (e.g. errors) of Zone 1 , etc. |
| Scaling | Holding Register value 65535 = Zone level 100% |
| Scenes | Coil or Holding Register number 2001 gets or sets the state of Scene 1 , etc. |
| Operating Properties | Holding Register number 3000 gets or sets the value of Operating Property 0 , etc. |
| Flags | Coil or Holding Register number 4000 gets or sets the state of Flag Group 0 , Flag 0 . Number 4010 is Flag Group 1 , Flag 0 , etc. |

Testing

The Wireshark software (<https://www.wireshark.org/>) can be used to view the details of Modbus messages going in and out of your computer. By using the “mbtcp” filter, only the Modbus messages will be displayed.


The screen shots below show the query and response when reading Holding Register 23. Note that the address used in this case was 22, showing that the Modbus Master was using the typical offset of 1.

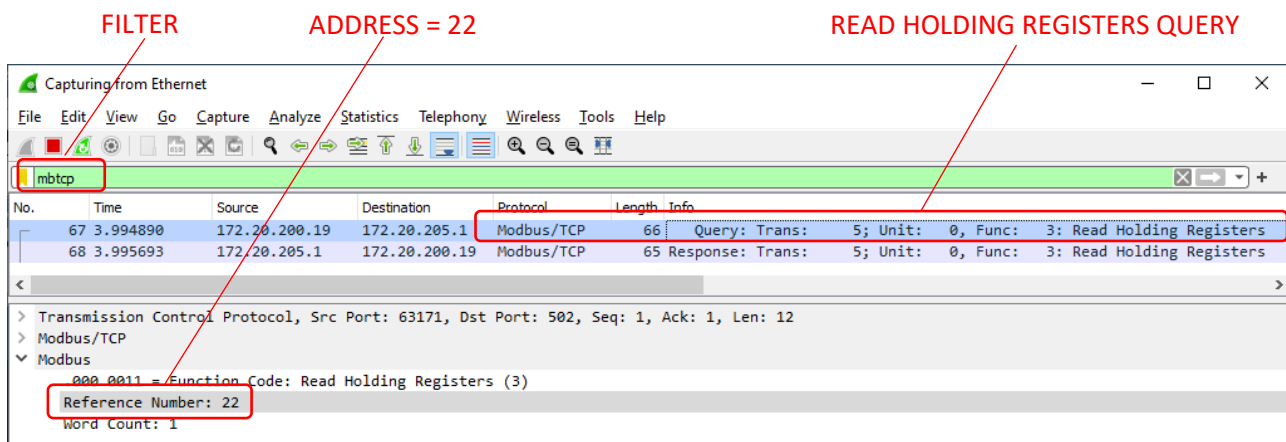

FILTER: mbtcp

ADDRESS = 22: Reference Number: 22

READ HOLDING REGISTERS QUERY: Modbus/TCP 66 Query: Trans: 5; Unit: 0, Func: 3: Read Holding Registers

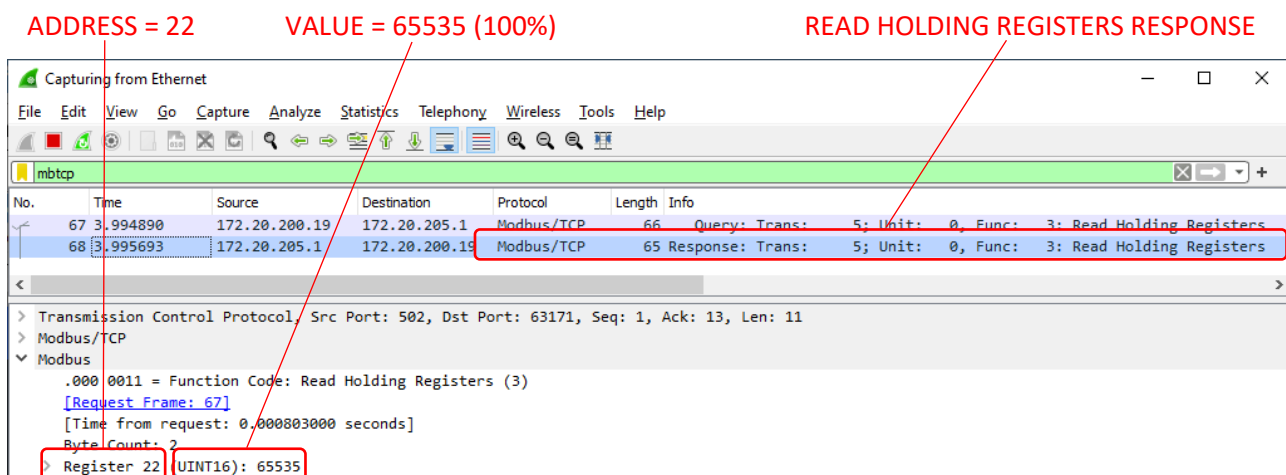

ADDRESS = 22: Register 22

VALUE = 65535 (100%): UINT16): 65535

READ HOLDING REGISTERS RESPONSE: Modbus/TCP 65 Response: Trans: 5; Unit: 0, Func: 3: Read Holding Registers

Change History

| Rev | Date | Updated By | Comment |
|-----|-------------|------------|---|
| 1 | 7 Nov 2019 | DS | First Release. |
| 2 | 11 Nov 2019 | DS | Added new features. |
| 3 | 15 Jan 2020 | DS | Added Zone Error Status. |
| 4 | 23 Sep 2020 | DS | Corrected description of offsets. |
| 5 | 3 Jul 2023 | DS | Simplified explanation of address mapping. Added details for use with RAPIX Scenes, Flags and Operating Properties. Added details of Project Report and use of Wireshark. |
| 6 | 16 Aug 2024 | DS | Added details to Zone Error Status table. |
| 7 | 4 Oct 2024 | DS | Added explanation of the system architecture. Added option for including occupancy in zone status. |
| 8 | 6 Dec 2024 | DS | Added zone colour details. |
| 9 | 16 Dec 2025 | DS | Added details of using Tags to select available entities. |

Contact Information

Web www.ozuno.com
All Enquiries +61 8 8362 7584 sales@ozuno.com

Ozuno Trading Pty Ltd

ABN: 96 621 194 483

RAPIX is a trademark of Ozuno Holdings Pty Ltd.

COPYRIGHT © 2020-2024 This document is copyright by Ozuno Holdings Limited. Except as permitted under relevant law, no part of this application note may be reproduced by any process without written permission of and acknowledgement to Ozuno.

DISCLAIMER. Ozuno Holdings Pty Ltd d (Ozuno) reserves the right to alter the specifications, designs or other features of any items and to discontinue any items at any time without notice and without liability. While every effort is made to ensure that all information in this application note is correct, no warranty of accuracy is given and Ozuno shall not be liable for any error.

TRADEMARKS. The identified trademarks and copyrights are the property of Ozuno Holdings Pty Ltd unless otherwise noted.

APN-RAPIX-007-09 16 Dec 2025